



INSTRUCTIONS FOR THE OIL FILLER & BREATHER NUT TOOL EMPI PT# 5761

This tool has been designed to remove and install the nut which holds the oil filler and breather tin to the generator stand.

- 1) THOROUGHLY CLEAN the retaining nut removing all grime and oil. Be sure the slots on the top of the nut are cleaned out and dried.
- 2) Snap the tool over the end of a 1/2" drive extension. This will allow the tool to reach down to the nut through the oil fill opening. The tool fits into the slots on the top of the nut acting like a large screwdriver to turn the nut.
- 3) When turning the nut, APPLY PLENTY OF PRESSURE holding the ears of the tool into the slot of the nut.



NOTE: If stopping an oil leak or installing a new unit, be sure to use the gasket which goes between the tin and the generator stand.

99-4076 for 5761 / 0206



INSTRUCTIONS FOR THE OIL FILLER & BREATHER NUT TOOL EMPI PT# 5761

This tool has been designed to remove and install the nut which holds the oil filler and breather tin to the generator stand.

- 1) THOROUGHLY CLEAN the retaining nut removing all grime and oil. Be sure the slots on the top of the nut are cleaned out and dried.
- 2) Snap the tool over the end of a 1/2" drive extension. This will allow the tool to reach down to the nut through the oil fill opening. The tool fits into the slots on the top of the nut acting like a large screwdriver to turn the nut.
- 3) When turning the nut, APPLY PLENTY OF PRESSURE holding the ears of the tool into the slot of the nut.



NOTE: If stopping an oil leak or installing a new unit, be sure to use the gasket which goes between the tin and the generator stand.

99-4076 for 5761 / 0206



INSTRUCTIONS FOR THE OIL FILLER & BREATHER NUT TOOL EMPI PT# 5761

This tool has been designed to remove and install the nut which holds the oil filler and breather tin to the generator stand.

- 1) THOROUGHLY CLEAN the retaining nut removing all grime and oil. Be sure the slots on the top of the nut are cleaned out and dried.
- 2) Snap the tool over the end of a 1/2" drive extension. This will allow the tool to reach down to the nut through the oil fill opening. The tool fits into the slots on the top of the nut acting like a large screwdriver to turn the nut.
- 3) When turning the nut, APPLY PLENTY OF PRESSURE holding the ears of the tool into the slot of the nut.



NOTE: If stopping an oil leak or installing a new unit, be sure to use the gasket which goes between the tin and the generator stand.

99-4076 for 5761 / 0206



INSTRUCTIONS FOR THE OIL FILLER & BREATHER NUT TOOL EMPI PT# 5761

This tool has been designed to remove and install the nut which holds the oil filler and breather tin to the generator stand.

- 1) THOROUGHLY CLEAN the retaining nut removing all grime and oil. Be sure the slots on the top of the nut are cleaned out and dried.
- 2) Snap the tool over the end of a 1/2" drive extension. This will allow the tool to reach down to the nut through the oil fill opening. The tool fits into the slots on the top of the nut acting like a large screwdriver to turn the nut.
- 3) When turning the nut, APPLY PLENTY OF PRESSURE holding the ears of the tool into the slot of the nut.



NOTE: If stopping an oil leak or installing a new unit, be sure to use the gasket which goes between the tin and the generator stand.

99-4076 for 5761 / 0206