



Instruction for Roof Rack Locks 15-2005

1. With the rack installed on car, measure up from the bottom of the clamp wing nut 1/2" and mark the clamp stud threads.
2. Remove the clamp and cut the stud on your mark. De-burr the cut edge of threads and test fit the nut.
3. Reinstall the clamp onto the rack. Slide the lock cup over the clamp stud open end up. Apply a drop of thread lock and install special nut provided. Tighten with a socket. **DO NOT over tighten.**
4. Double check height of clamp stud, it should not extend above the top of the nut. Washers are included to shim up lock small amounts if necessary.
5. Lock cylinder into cup and install cover over assembly to protect from dirt and moisture.

99-4115-0/1202



Instruction for Roof Rack Locks 15-2005

1. With the rack installed on car, measure up from the bottom of the clamp wing nut 1/2" and mark the clamp stud threads.
2. Remove the clamp and cut the stud on your mark. De-burr the cut edge of threads and test fit the nut.
3. Reinstall the clamp onto the rack. Slide the lock cup over the clamp stud open end up. Apply a drop of thread lock and install special nut provided. Tighten with a socket. **DO NOT over tighten.**
4. Double check height of clamp stud, it should not extend above the top of the nut. Washers are included to shim up lock small amounts if necessary.
5. Lock cylinder into cup and install cover over assembly to protect from dirt and moisture.

99-4115-0/1202



Instruction for Roof Rack Locks 15-2005

1. With the rack installed on car, measure up from the bottom of the clamp wing nut 1/2" and mark the clamp stud threads.
2. Remove the clamp and cut the stud on your mark. De-burr the cut edge of threads and test fit the nut.
3. Reinstall the clamp onto the rack. Slide the lock cup over the clamp stud open end up. Apply a drop of thread lock and install special nut provided. Tighten with a socket. **DO NOT over tighten.**
4. Double check height of clamp stud, it should not extend above the top of the nut. Washers are included to shim up lock small amounts if necessary.
5. Lock cylinder into cup and install cover over assembly to protect from dirt and moisture.

99-4115-0/1202



Instruction for Roof Rack Locks 15-2005

1. With the rack installed on car, measure up from the bottom of the clamp wing nut 1/2" and mark the clamp stud threads.
2. Remove the clamp and cut the stud on your mark. De-burr the cut edge of threads and test fit the nut.
3. Reinstall the clamp onto the rack. Slide the lock cup over the clamp stud open end up. Apply a drop of thread lock and install special nut provided. Tighten with a socket. **DO NOT over tighten.**
4. Double check height of clamp stud, it should not extend above the top of the nut. Washers are included to shim up lock small amounts if necessary.
5. Lock cylinder into cup and install cover over assembly to protect from dirt and moisture.

99-4115-0/1202



Instruction for Roof Rack Locks 15-2005

1. With the rack installed on car, measure up from the bottom of the clamp wing nut 1/2" and mark the clamp stud threads.
2. Remove the clamp and cut the stud on your mark. De-burr the cut edge of threads and test fit the nut.
3. Reinstall the clamp onto the rack. Slide the lock cup over the clamp stud open end up. Apply a drop of thread lock and install special nut provided. Tighten with a socket. **DO NOT over tighten.**
4. Double check height of clamp stud, it should not extend above the top of the nut. Washers are included to shim up lock small amounts if necessary.
5. Lock cylinder into cup and install cover over assembly to protect from dirt and moisture.

99-4115-0/1202



Instruction for Roof Rack Locks 15-2005

1. With the rack installed on car, measure up from the bottom of the clamp wing nut 1/2" and mark the clamp stud threads.
2. Remove the clamp and cut the stud on your mark. De-burr the cut edge of threads and test fit the nut.
3. Reinstall the clamp onto the rack. Slide the lock cup over the clamp stud open end up. Apply a drop of thread lock and install special nut provided. Tighten with a socket. **DO NOT over tighten.**
4. Double check height of clamp stud, it should not extend above the top of the nut. Washers are included to shim up lock small amounts if necessary.
5. Lock cylinder into cup and install cover over assembly to protect from dirt and moisture.

99-4115-0/1202