

# Instructions for 10-1105 Spindle Mount Wheel

## *Fits with Link Pin Spindles – Type 1 thru 1965*

This Spindle Mount Wheel is for Off-Road Use **ONLY** and may never be used on the street. It is designed for use **ONLY** on the front of Light-Weight Vehicles (Sand Rails, etc.).

Designed for use on Type 1 Link Pin spindles thru 1965, the Bearing Races have been installed on the wheel. Bearings must be properly greased and installed. If used in the sand, it is recommended that the bearings be cleaned, checked and re-greased or replaced after each encounter.

Replacement Races **MUST** be Pressed-In.

99-4354/1212

# Instructions for 10-1105 Spindle Mount Wheel

## *Fits with Link Pin Spindles – Type 1 thru 1965*

This Spindle Mount Wheel is for Off-Road Use **ONLY** and may never be used on the street. It is designed for use **ONLY** on the front of Light-Weight Vehicles (Sand Rails, etc.).

Designed for use on Type 1 Link Pin spindles thru 1965, the Bearing Races have been installed on the wheel. Bearings must be properly greased and installed. If used in the sand, it is recommended that the bearings be cleaned, checked and re-greased or replaced after each encounter.

Replacement Races **MUST** be Pressed-In.

99-4354/1212