

**Instructions for Voltage Regulator #98-9068-B
Regulator is Mounted:**

1. On the Generator.
2. Under the Rear Seat (1967, 1968 & 1969).
3. Left side of Engine Compartment (Ghia).

Removal:

1. **DISCONNECT BATTERY GROUND STRAP.**
2. Disconnect cables from terminals B+(51) and 61 at the Regulator.
3. Remove the regulator from its mounting.
4. Disconnect +(D+) and F(DF) wires at the bottom of the Regulator.

Installation:

1. Reverse Removal Procedures making certain that:
 - a. Thick cable from the positive brush must be connected to Terminal +(D+) at the bottom of the Regulator.
 - b. Thin cable from the field windings must be connected to F(DF) terminal at the bottom of the Regulator.

99-4391-0/0811

**Instructions for Voltage Regulator #98-9068-B
Regulator is Mounted:**

1. On the Generator.
2. Under the Rear Seat (1967, 1968 & 1969).
3. Left side of Engine Compartment (Ghia).

Removal:

1. **DISCONNECT BATTERY GROUND STRAP.**
2. Disconnect cables from terminals B+(51) and 61 at the Regulator.
3. Remove the regulator from its mounting.
4. Disconnect +(D+) and F(DF) wires at the bottom of the Regulator.

Installation:

1. Reverse Removal Procedures making certain that:
 - a. Thick cable from the positive brush must be connected to Terminal +(D+) at the bottom of the Regulator.
 - b. Thin cable from the field windings must be connected to F(DF) terminal at the bottom of the Regulator.

99-4391-0/0811

**Instructions for Voltage Regulator #98-9068-B
Regulator is Mounted:**

1. On the Generator.
2. Under the Rear Seat (1967, 1968 & 1969).
3. Left side of Engine Compartment (Ghia).

Removal:

1. **DISCONNECT BATTERY GROUND STRAP.**
2. Disconnect cables from terminals B+(51) and 61 at the Regulator.
3. Remove the regulator from its mounting.
4. Disconnect +(D+) and F(DF) wires at the bottom of the Regulator.

Installation:

1. Reverse Removal Procedures making certain that:
 - a. Thick cable from the positive brush must be connected to Terminal +(D+) at the bottom of the Regulator.
 - b. Thin cable from the field windings must be connected to F(DF) terminal at the bottom of the Regulator.

99-4391-0/0811

**Instructions for Voltage Regulator #98-9068-B
Regulator is Mounted:**

1. On the Generator.
2. Under the Rear Seat (1967, 1968 & 1969).
3. Left side of Engine Compartment (Ghia).

Removal:

1. **DISCONNECT BATTERY GROUND STRAP.**
2. Disconnect cables from terminals B+(51) and 61 at the Regulator.
3. Remove the regulator from its mounting.
4. Disconnect +(D+) and F(DF) wires at the bottom of the Regulator.

Installation:

1. Reverse Removal Procedures making certain that:
 - a. Thick cable from the positive brush must be connected to Terminal +(D+) at the bottom of the Regulator.
 - b. Thin cable from the field windings must be connected to F(DF) terminal at the bottom of the Regulator.

99-4391-0/0811

**Instructions for Voltage Regulator #98-9068-B
Regulator is Mounted:**

1. On the Generator.
2. Under the Rear Seat (1967, 1968 & 1969).
3. Left side of Engine Compartment (Ghia).

Removal:

1. **DISCONNECT BATTERY GROUND STRAP.**
2. Disconnect cables from terminals B+(51) and 61 at the Regulator.
3. Remove the regulator from its mounting.
4. Disconnect +(D+) and F(DF) wires at the bottom of the Regulator.

Installation:

1. Reverse Removal Procedures making certain that:
 - a. Thick cable from the positive brush must be connected to Terminal +(D+) at the bottom of the Regulator.
 - b. Thin cable from the field windings must be connected to F(DF) terminal at the bottom of the Regulator.

99-4391-0/0811

**Instructions for Voltage Regulator #98-9068-B
Regulator is Mounted:**

1. On the Generator.
2. Under the Rear Seat (1967, 1968 & 1969).
3. Left side of Engine Compartment (Ghia).

Removal:

1. **DISCONNECT BATTERY GROUND STRAP.**
2. Disconnect cables from terminals B+(51) and 61 at the Regulator.
3. Remove the regulator from its mounting.
4. Disconnect +(D+) and F(DF) wires at the bottom of the Regulator.

Installation:

1. Reverse Removal Procedures making certain that:
 - a. Thick cable from the positive brush must be connected to Terminal +(D+) at the bottom of the Regulator.
 - b. Thin cable from the field windings must be connected to F(DF) terminal at the bottom of the Regulator.

99-4391-0/0811