




# C.V. BOOT SUBSTITUTES


**Silicone vs. Neoprene**.....Many rebuilders choose not to use silicone C.V. boots. Listed below are the neoprene replacements for the OEM silicone boots listed in our C.V. boot catalog.

Silicone	Neoprene
86-1055 .....	86-1053
86-1061 .....	86-1058
86-1069 .....	86-1067
86-2110 .....	86-2108
86-2114 .....	86-2108
86-2208 .....	86-1193

Silicone	Neoprene
86-2216 .....	86-2215
86-2218 .....	86-2414
86-2258 .....	86-2193
86-2298 .....	86-1098
86-2415 .....	86-1115

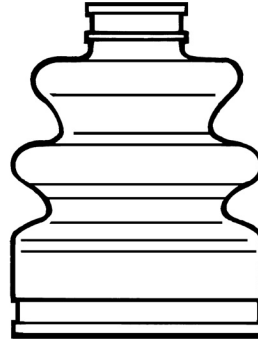

Silicone

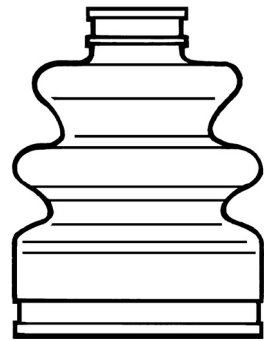

Neoprene Replacement

Design Variations			
<p><b>86-2148</b> OEM Design</p>	<p><b>86-2381*</b> EMPI Design</p>	<p><b>86-2205</b> OEM Design</p>	<p><b>86-2123*</b> EMPI Design</p>
<p><b>86-2326</b> OEM Design</p>	<p><b>86-2240</b> EMPI Design</p>	<p><b>86-2342</b> OEM Design</p>	<p><b>86-2119</b> EMPI Design</p>

Note: Part numbers with (\*) next to it are listed in the buyers guide, but not in the application section.