

CABLE SHORTENING KIT INSTRUCTIONS

Clutch Instructions

Install end stud to clutch arm eye with locknut run up about one third of thread distance. Install clutch cable through end stud and secure with Jamb nut as forward pressure is held on clutch arm eye. Cut clutch cable after installation to assure proper length is maintained for installation.


Throttle Instructions

Hold cable to base of Carb arm and cut one half inch longer than dimension to Carb arm. Install cable to Carb linkage and secure with setscrew. Install cable and linkage end to Carb arm. Check for binding and full travel.

Emergency Instructions

Install cable adjuster to brake handle mount pad loosely with nuts run in approximately one third of thread distance. Full cable to installation point with pressure exerted mark and cut. Install cable to adjuster and secure with setscrew. Repeat procedure for opposite side cable and adjust both sides individually.

99-4001-0/0915

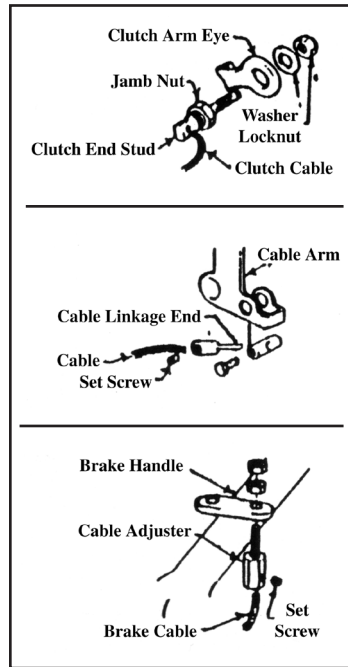

CABLE SHORTENING KIT INSTRUCTIONS

Clutch Instructions

Install end stud to clutch arm eye with locknut run up about one third of thread distance. Install clutch cable through end stud and secure with Jamb nut as forward pressure is held on clutch arm eye. Cut clutch cable after installation to assure proper length is maintained for installation.


Throttle Instructions

Hold cable to base of Carb arm and cut one half inch longer than dimension to Carb arm. Install cable to Carb linkage and secure with setscrew. Install cable and linkage end to Carb arm. Check for binding and full travel.

Emergency Instructions

Install cable adjuster to brake handle mount pad loosely with nuts run in approximately one third of thread distance. Full cable to installation point with pressure exerted mark and cut. Install cable to adjuster and secure with setscrew. Repeat procedure for opposite side cable and adjust both sides individually.

99-4001-0/0915

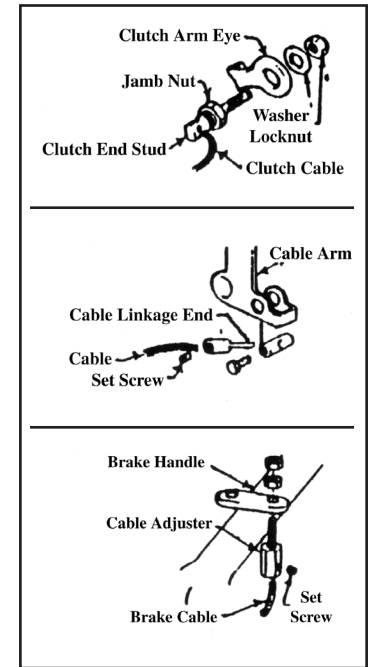

CABLE SHORTENING KIT INSTRUCTIONS

Clutch Instructions

Install end stud to clutch arm eye with locknut run up about one third of thread distance. Install clutch cable through end stud and secure with Jamb nut as forward pressure is held on clutch arm eye. Cut clutch cable after installation to assure proper length is maintained for installation.


Throttle Instructions

Hold cable to base of Carb arm and cut one half inch longer than dimension to Carb arm. Install cable to Carb linkage and secure with setscrew. Install cable and linkage end to Carb arm. Check for binding and full travel.

Emergency Instructions

Install cable adjuster to brake handle mount pad loosely with nuts run in approximately one third of thread distance. Full cable to installation point with pressure exerted mark and cut. Install cable to adjuster and secure with setscrew. Repeat procedure for opposite side cable and adjust both sides individually.

99-4001-0/0915

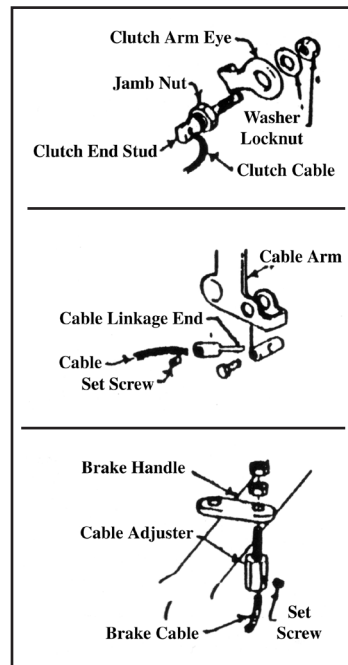

CABLE SHORTENING KIT INSTRUCTIONS

Clutch Instructions

Install end stud to clutch arm eye with locknut run up about one third of thread distance. Install clutch cable through end stud and secure with Jamb nut as forward pressure is held on clutch arm eye. Cut clutch cable after installation to assure proper length is maintained for installation.

Throttle Instructions

Hold cable to base of Carb arm and cut one half inch longer than dimension to Carb arm. Install cable to Carb linkage and secure with setscrew. Install cable and linkage end to Carb arm. Check for binding and full travel.

Emergency Instructions

Install cable adjuster to brake handle mount pad loosely with nuts run in approximately one third of thread distance. Full cable to installation point with pressure exerted mark and cut. Install cable to adjuster and secure with setscrew. Repeat procedure for opposite side cable and adjust both sides individually.

99-4001-0/0915

